


Tow connector wiring diagram

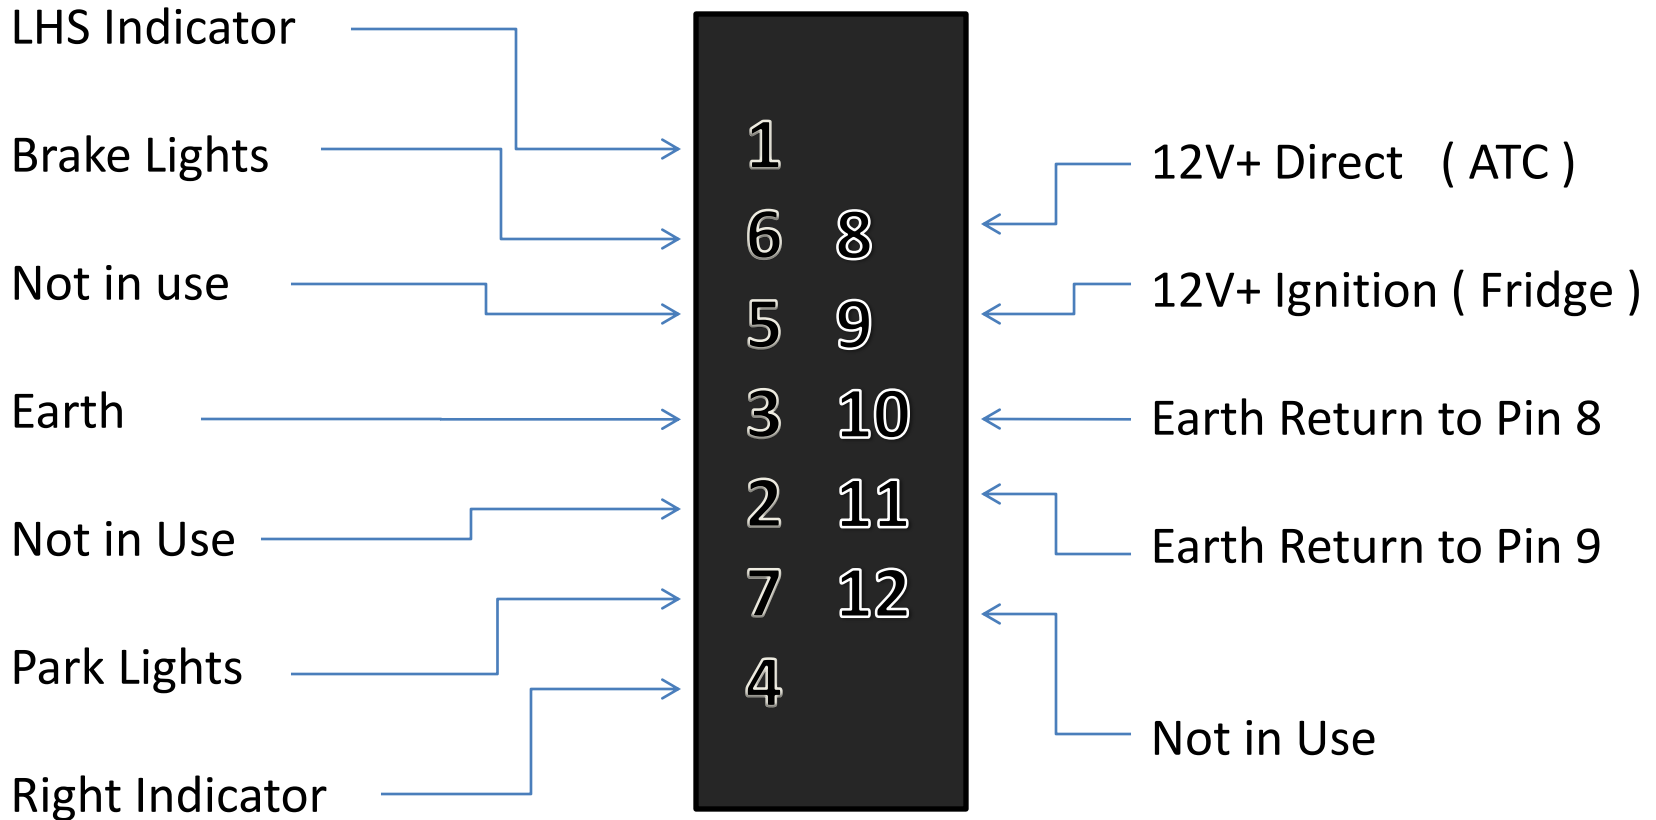

Pins 8 & 9 needs to be fused 12V 30A supplies.

Pins 10 & 11 Separate Battery negatives with 30A capacity each.